



**CLASS 2
TYPE HL
SELV**

Installation Instruction



- * Read instruction completely before installation.
- * Turn off electricity before wiring.
- * Only qualified personal should install the unit.
- * Installation must comply with the NEC
- * Ensure the unit has input, output voltage and output wattage proper for your application.

Mounting

The LED driver must be mounted in at least 5" of a free flow air space for proper ventilation.

The LED driver must never be mounted next to or above heat radiated objects.

The Maximum ambient temperature should not exceed 50 deg. C (110 deg. F).

Suitable for dry, damp and wet location, IP44.

Input Connection

Bring your line and neutral wires and connect them to the driver's Black (live) and white (neutral) power supply leads.


Output Connection

Bring your lights wires and connect to the driver's lead wires, V+ to Red, V- to Black.

Make sure all your connection are tight.

Wiring Diagram

Triac dimming - Triac/MLV Load type

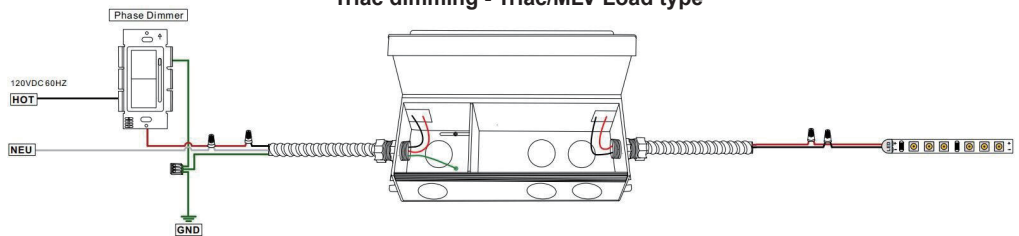

Triac dimming - ELV Load type

